



Quick guide Q-Power backpack system

1. Setup

- 1.1 Connect the wired remote control (Fig. 1) to the battery pack
- 1.2 The battery with the **power button** (b) (Fig. 2) switch on this lights up green (b)
- 1.3 The **battery indicator (Fig. 3)** should light **green** or **yellow**, if the display is **red**, please charge the battery (see chapter Charging)







- 1.4 Put on the backpack (Fig. 4) and tighten the straps
- 1.5 Connect the supplied ROTAQLEEN cable to the wired remote control (Fig. 5)
- 1.6 Attach the cable to the QLEEN telescopic rod and connect it to the ROTAQLEEN (Fig. 6)
- 1.7 Connect the water supply to the ROTAQLEEN with a hose
- 1.8 For best results, we recommend using one of our QLEEN water supply systems, which produce pure water that dries without leaving streaks









2. Cleaning

- 2.1 Open the water supply
- 2.2 Place the ROTAQLEEN on the surface to be cleaned and hold the poles with one hand.
- 2.3 Switch the control switch (Fig. 7) on the cable remote control forward with the other hand
- 2.4 The ROTAQLEEN starts in forward mode and the surface can be cleaned
- 2.5 For reverse operation, switch the **control switch (Fig. 7)** in the opposite direction
- 2.6 To stop cleaning, move the **control switch (Fig. 7)** to the center position



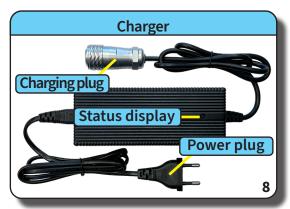

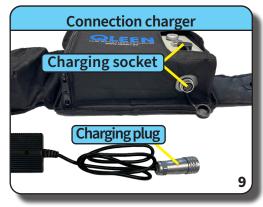

3. Charge

- 3.1 Connect the **charging plug (Fig. 9)** to the **charging socket (Fig. 9)** at the front or bottom.
- 3.2 Connect the mains plug (Fig. 8) to the socket.
- 3.3 The status indicator (Fig. 8) lights up during charging red
- 3.4 If the battery is fully charged, the display changes to green
- 3.5 If the **status indicator (Fig. 8)** lights up **green** when plugged in, the **charging plug (Fig. 9)** is not properly connected to the battery



Karlhans Lehmann KG, Kranichstraße 2a, DE -17235 Neustrelitz

Homepage: www.gleen.de

Phone: +49 (0)3981 48850

E-Mail: info@gleen.de