





Quick Guide QLEEN PURASTART Mini

1. Setup

- 1.1 Connect the closed shut-off tap (Fig. 2) to the bottle head outlet.
- **1.2** Connect the water inlet (Fig. 1) with Gardena hose to the house water connection and open the water supply of the house water connection.
- 1.3 Connect the hose to the outlet of the **shut-off tap (Fig. 2)** and fasten it to the rod and to the and to the brush bow
- 1.4 The machine is set up

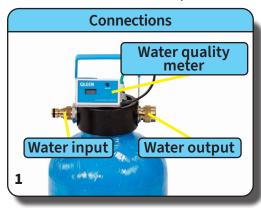



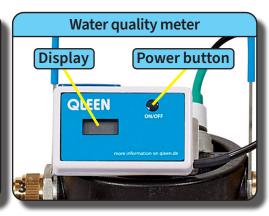

2. Cleaning

- 2.1 Open the shut-off tap (Fig. 2).
- 2.2 After a short time, the clean water arrives at the nozzles

3. Water quality meter (Fig. 3)

- **3.1** Switch on with the power button, the meter switches off automatically after 10 min.
- **3.2** The outgoing pure water is measured and shown on the display
- 3.3 We recommend to change the granulate at a value of 50 µS

4. After cleaning

- **4.1** Close the water supply and disconnect
- **4.2** Drain the water from the granulate bottle
- 4.3 Close the shut-off tap (Fig. 2)



Karlhans Lehmann KG, Kranichstraße 2a, DE -17235 Neustrelitz

Homepage: www.qleen.de

Phone: +49 (0)3981 48850

E-Mail: info@gleen.de